



iGATE - GSM Gate Opener

1) AUTOMATIC GATE OPENER

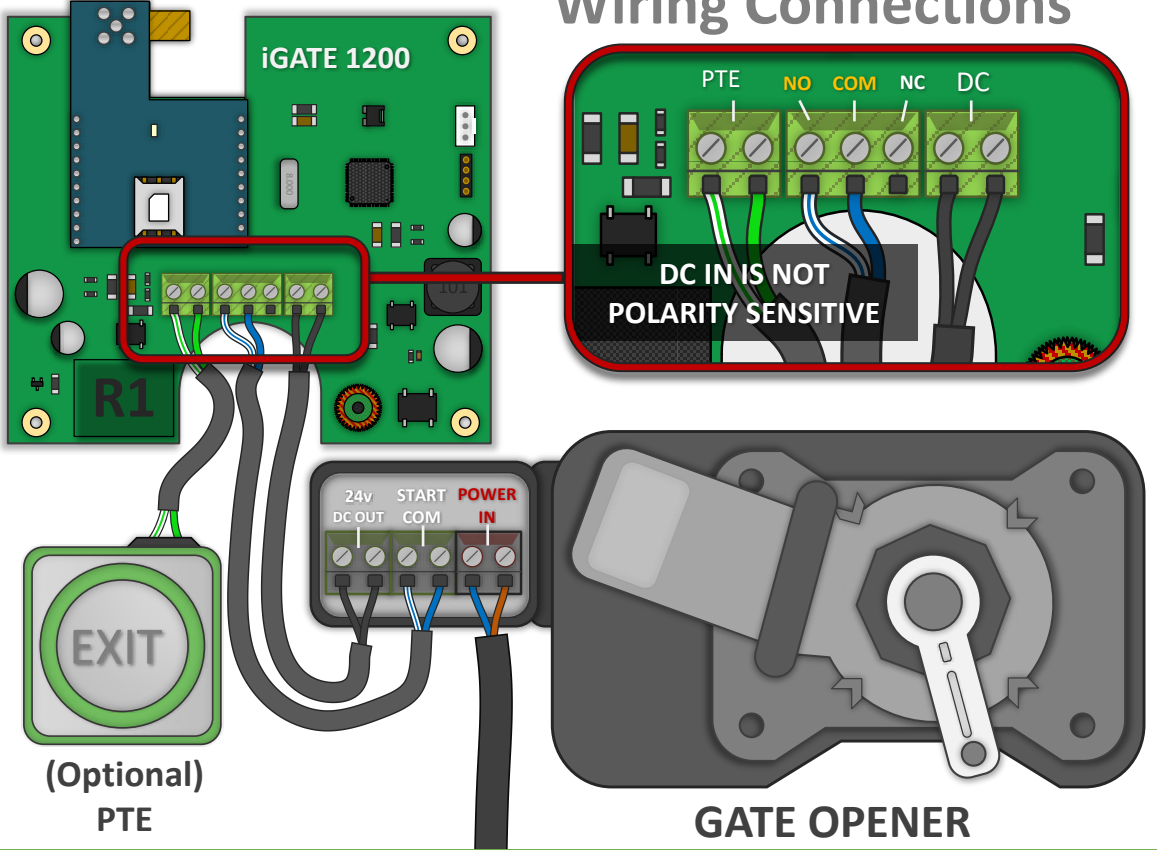


2) MAGNETIC LOCK (ALTERNATIVE WIRING DIAGRAM)

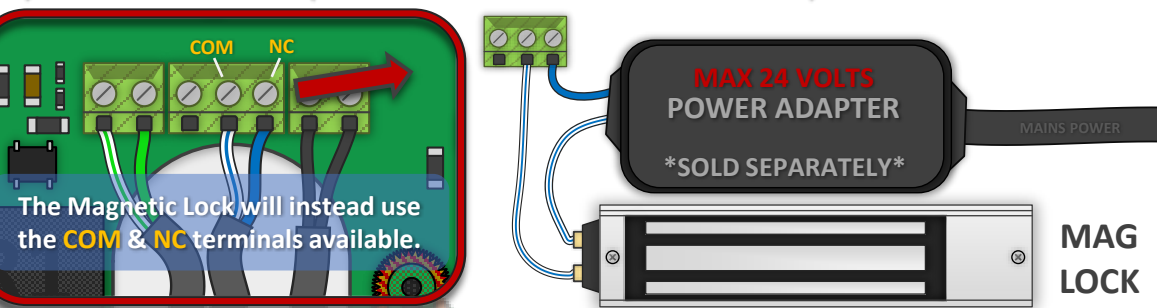

SIM ORIENTATION

ALWAYS ensure the system is switched **OFF** when adding or removing your SIM card and its orientation is correct.

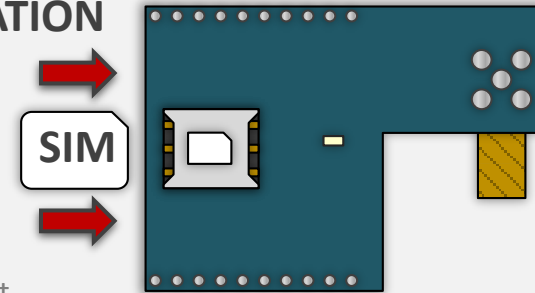

CONNECTION TO NETWORK



4G: Quick Flashing = **Standby** | Constant ON/OFF = **Searching**

2G: Slow Flashing = **Standby** | Quick Flashing = **Searching**

Commands	SMS Strings (no spaces)
Check Signal Level	*20#
Check Stored Numbers	*21#
Check Relay Status	*22#
Add Caller ID Number	9999#72TELNUMBER#
Delete Caller ID Number	9999#73TELNUMBER#
Delete ALL Caller ID Numbers	9999#73*#
Program Open Mode*	9999#75?# Default : 0 Enable : 1
Program Service Call Number*	9999#77TELNUMBER#
Trigger Relay	1234#1#
Latch Relay	1234#2#
Unlatch Relay	1234#3#
Change Programming Passcode	9999#01????# Default : 9999
Change Access Control Passcode	9999#02????# Default : 1234
Change Relay Time	9999#50?# ? = Time in seconds
Factory Reset to Default Setup	9999#999#

***Open Mode** = Allow ANY number to open gate/door.



***Service Call Number** = *iGate* will call this number every 30 days to avoid SIM card from being deactivated.

iGATE - GSM Gate Opener


STILL HAVING TROUBLE?
Find all of our support options such as Web Chat,
Full Manuals, Customer Helpline and more on
our website:
WWW.AESGLOBALONLINE.COM

1 Download the programming/user app. 'AES Lite' (QR Codes below)

Tip: Use the **i** symbol for detailed information.
Note: The app will be grey until you select your product type and 'Finish' initial setup.

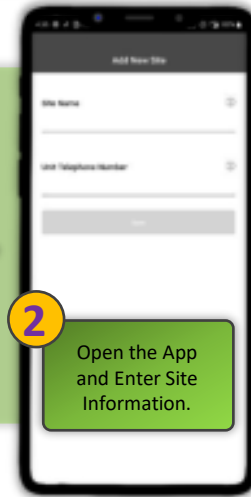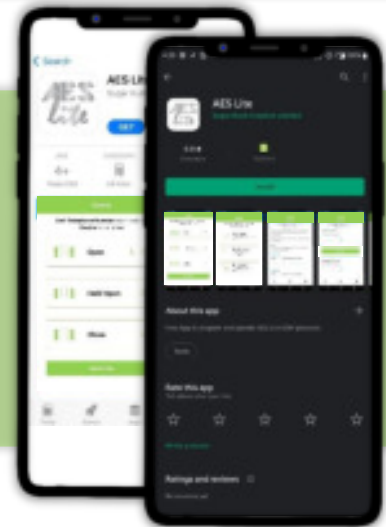


2 Open the App and Enter Site Information.

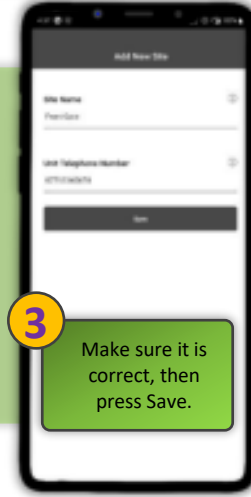

3 Make sure it is correct, then press Save.



4 Select the iGate 1200 product option and Finish.

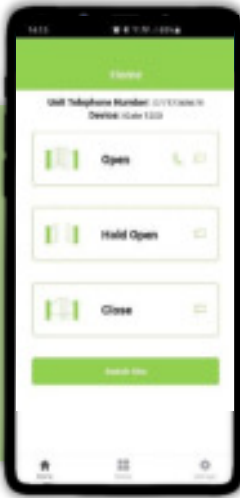

Momentary Trigger


Hold Open Permanently

Close after Holding

Switch to another site / intercom.

Check if the relay is open or closed at any time, remotely.


Check the signal strength to the network at any time. (1-31)

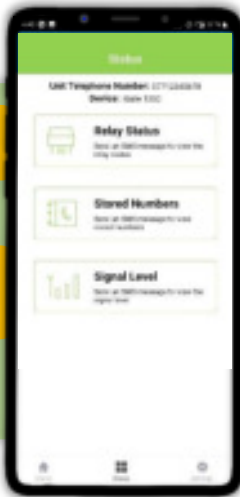

Check all stored numbers saved within the system memory.

Adjust Volumes, Security Passcodes & the Relay's Trigger Time.

Program Caller ID numbers to activate the relay when the unit is called.

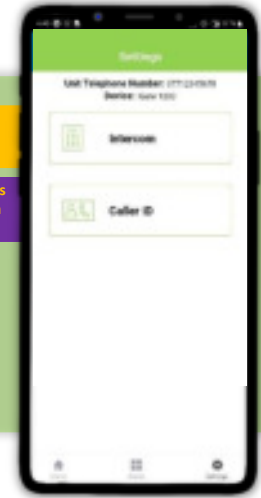

iGate 1200 - Complete List of Parameters

The table below show the complete list of features.
Programming messages below must begin with 9999# (assuming 9999 is still the programming passcode)...

Most recent firmware release:
v1.9.1

SMS String	Description	Default	Firmware Version
Passcodes			
9999#01code#	Change programming passcode. Code = 4 digit passcode	9999	Original
9999#02code#	Change access control passcode (SMS control of relays, or non-stored numbers can call intercom & enter code to trigger the relay). Code = 4 digit passcode	1234	v1.9.1 (i.e. unstored number to trigger)

Caller ID

9999#72number#	Store caller ID number (max 14 digits long. 1280 unique numbers). Only last 6 digits compared.	N/A	Original
9999#73number#	Delete caller ID number.	N/A	Original
9999#73*#	Delete all caller ID numbers.	N/A	Original
9999#75X#	Enable Open Caller ID mode. X = 0 or 1 (0 = Disable, 1 = Enable) (allow any unprogrammed number to call unit for immediate access)	0	Original
9999#88X#	Enable KPN Caller ID fix feature. X = 0 or 1 (0 = Disable, 1 = Enable) Feature added by default to prevent potential multi-triggering on some networks.	1	v1.9.1

Service Call

9999#77number#	Store a service number to receive a scheduled call from the unit every 30 days. Useful for SIM cards which are not often used, to prevent switch off by the network provider.	N/A	Original
9999#77*#	Delete the stored service number	N/A	Original

Relay

9999#50X#	Relay trigger time. X = 1-9999 seconds	1 sec	Original
1234#X#	Manually trigger,latch or unlatch relay by SMS. X = Relay function. (1 = Trigger relay, 2 = Latch relay, 3 = Unlatch relay)	N/A	Original

Information

*20#	Check reception level 1-31. Also includes firmware version.	N/A	Original
*21#	Check stored numbers. O = dial out number. I = dial in number. E = end of message.	N/A	Original
*22#	Check input status and relay status.	N/A	Original

Network Settings

9999#69X#	Change 4G modem to only operate on 2G/3G. [No 4G and no 1 hour ping] (4G Only) X = 1 enable ping ; X = 0 disable ping	1	Original
-----------	--	---	----------

Restore Defaults

9999#999#	Send with passcode string to clear all programming.	N/A	Original
Hard Reset PCB if programming passcode is forgotten: Short across the PTE terminals in power off state, before powering on. Keep the terminals shorted for 10 seconds when powered on.		N/A	Original
N.B. All stored information will be deleted after this process!			